



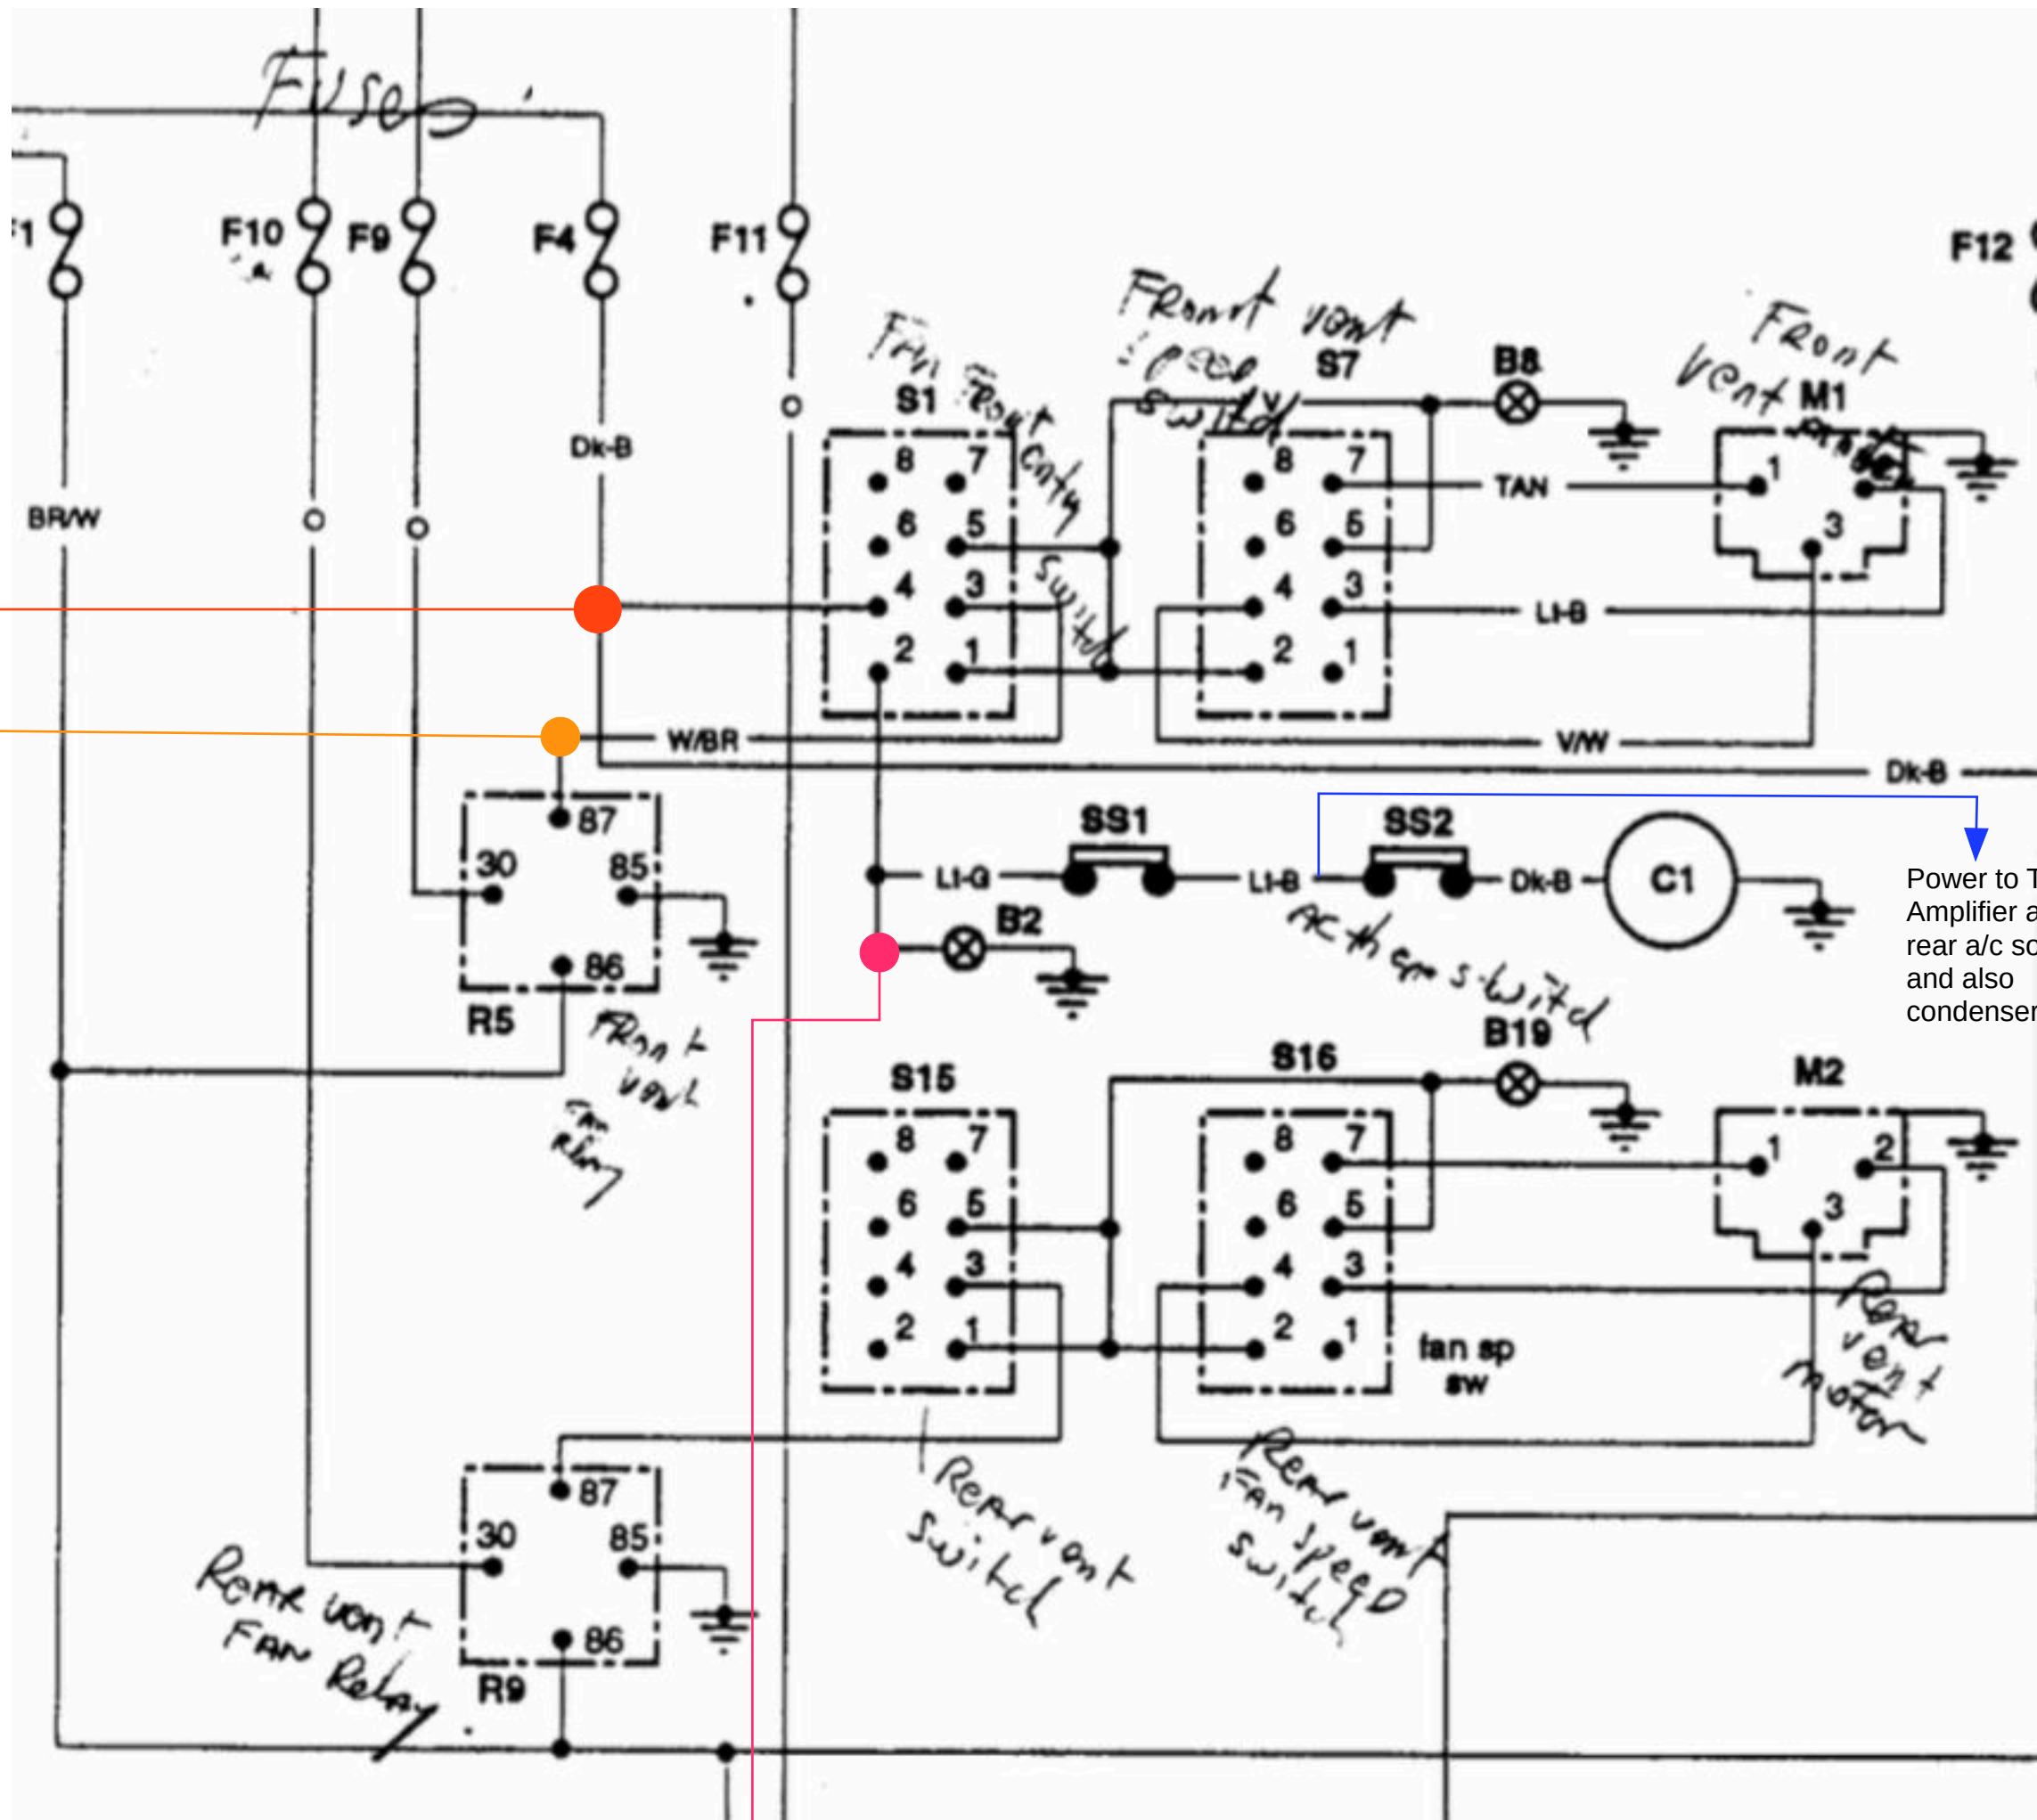

Compressor Power

Fan Supply

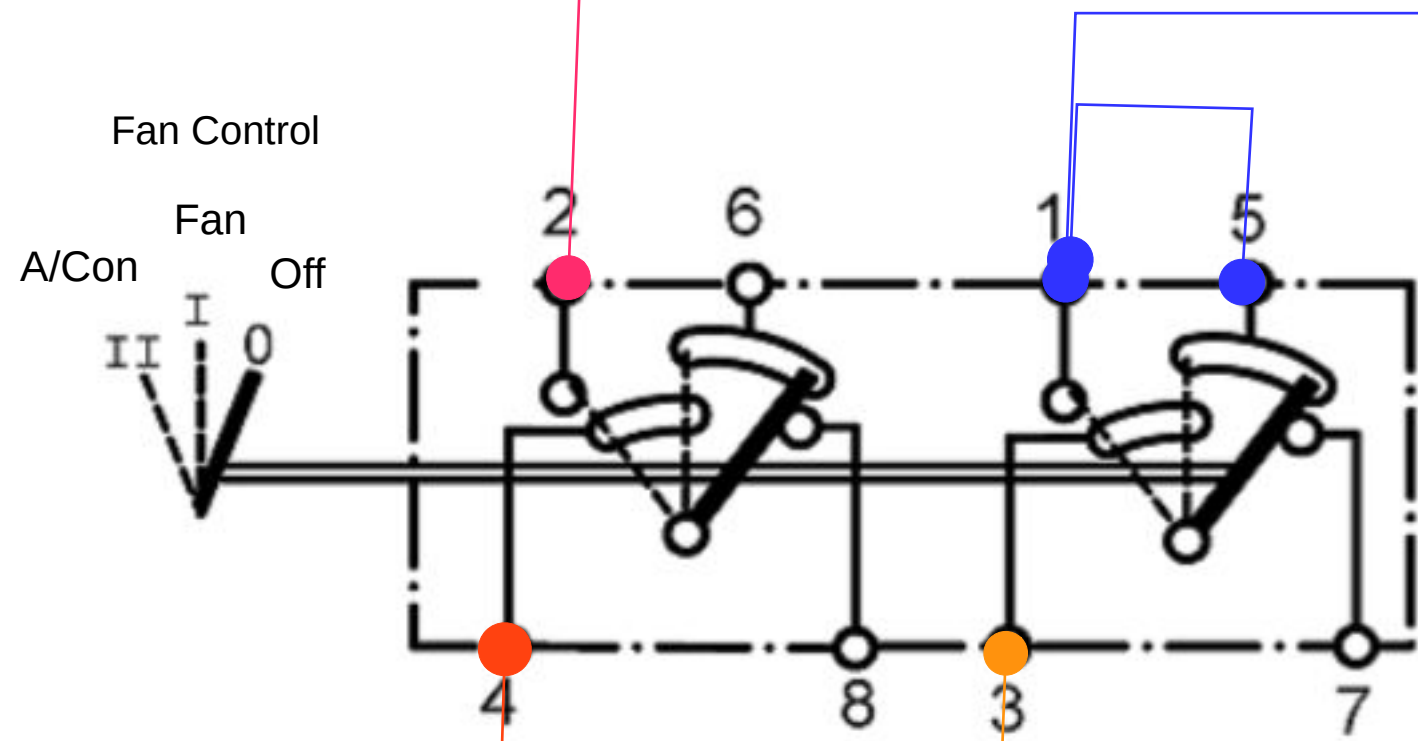

Fan Motor Power
From Relay R5 and Fuse F9


Compressor power source
from Fuse F4

Switch pin connections (SWF 511-091)

Pos 1 (Top/Off): 8-6 and 7-5
Pos 2 (Centre): 4-6 and 3-5
Pos 3 (Lower): 2-4 and 1-3

Fan Speed

High Med Low

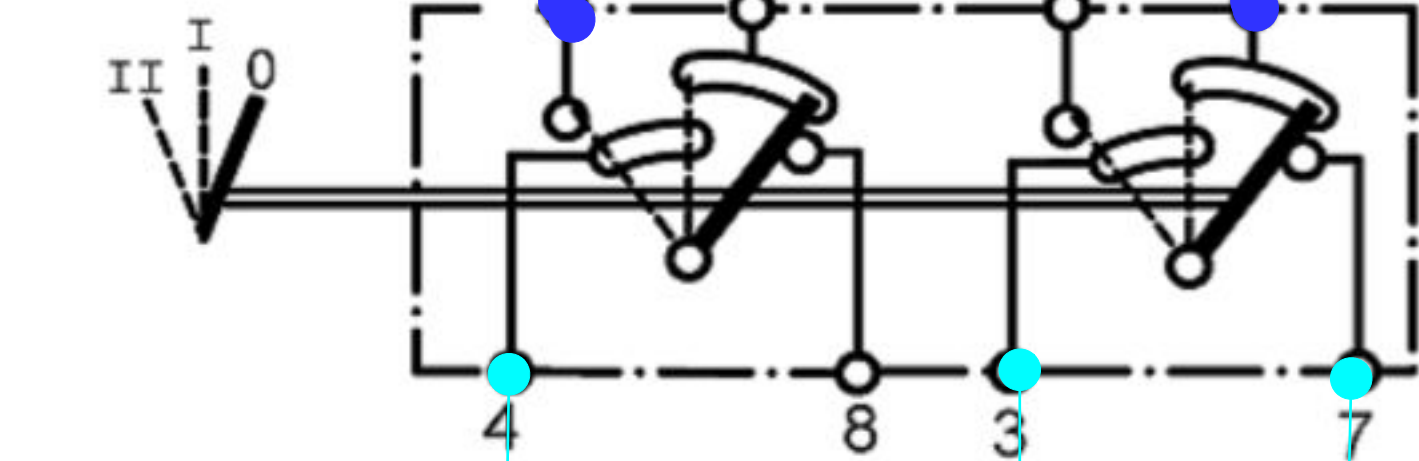

Fan Motor High

Front Fan Switch Wiring

S1 Front Fan
Control Switch

Switch Position

Compressor power
from Fuse F4

Fan Motor Power
From Relay R5 and
Fuse F9

S7 Front Fan
Speed Switch

Switch Position

Off

Off

Fan

(A/Con)

Power to compressor
and Switch Lamp.
Power to the rear evap
solenoid (not shown on
the wiring diagram) is
controlled from the
thermo amplifier..


Fan Supply

Fan motor power
and Switch Lamp

Fan Motor Low

Fan Motor Med

Fan Motor High

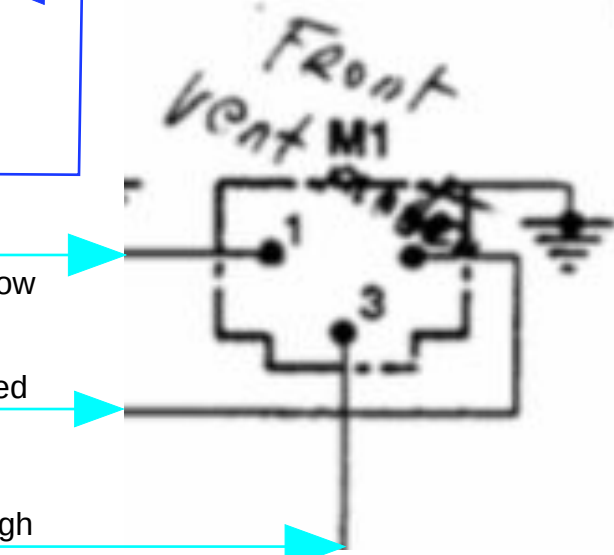

68 4257 31	511 090
	511 091
	511 092
	511 093
	511 094